


Air-Bloc 06, 21 or 32

## Control Joint

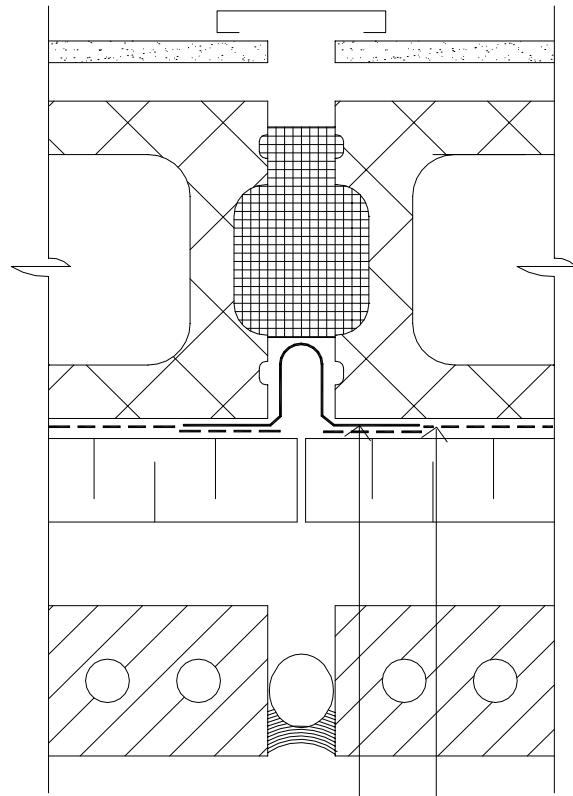

Blueskin® membrane

Air-Bloc 06, 21 or 32

## Expansion Joint

### Notes

1. No special treatment of the air/vapour barrier is required at masonry veneer control joints. Cavity wall compartmentalisation may be achieved using a metal strip extending floor to floor at control joints.
2. Alternatively, use mineral wool insulation or a strip of Blueskin membrane.
3. At expansion joints loop the Blueskin membrane into the opening and lap over both sides.

Air-Bloc 06, 21 or 32

## PLAN DETAILS

BRICK VENEER / CONC. BLK. WALL

Scale: N.T.S.

Issued: 08-14-97

Plot: 1:5

Revision: 06

# AB-15B96

# **BAKOR**

375 Pendant Drive, Unit #2,  
Mississauga, ON L5T 2W9  
10 avenue St. Pierre, Lachine, PQ H8R 1N7