


Brick Veneer  
 Air Space  
 Insulation  
 Air-Bloc 06, 21 or 32MR  
 Concrete Masonry Unit  
 Furring  
 Gypsum Board  
 HE 925 BES Sealant  
 (or ) Polybitume® 570-05

Blueskin® TWF  
 Thru-Wall Flashing  
 Sheet

Blueskin® SA or TG  
 Dampproof Course

Henry-Bakor waterproofing  
 or dampproofing membrane.

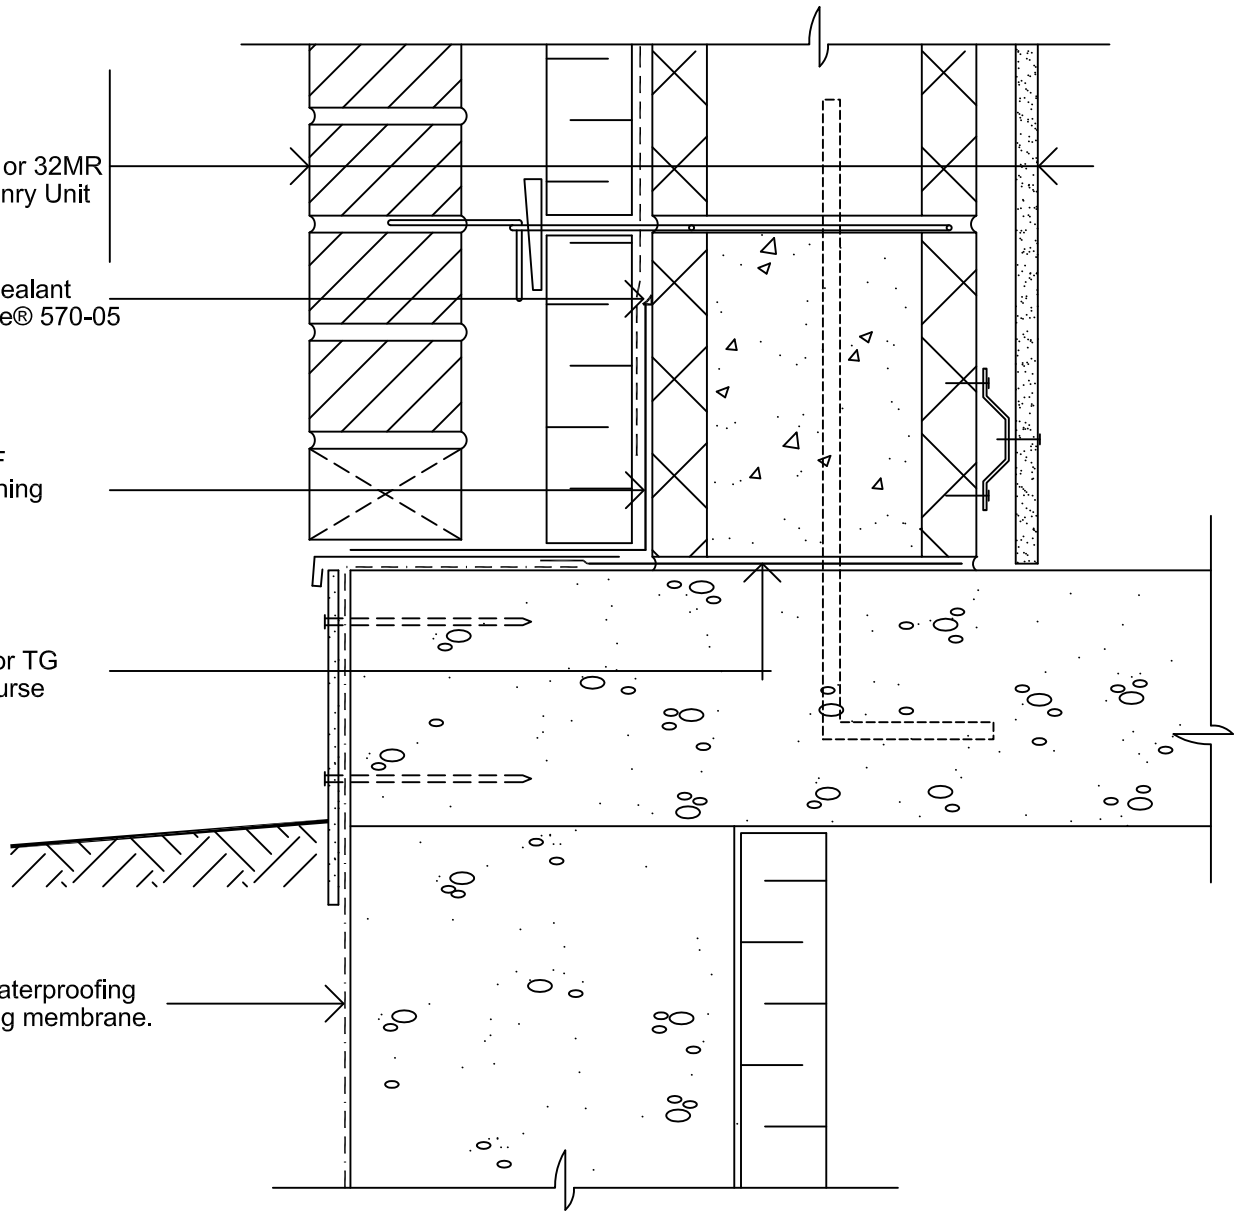

Notes:

1. Wedges may be used as a supplementary attachment method for the insulation.
2. It is recommended that the air/vapour barrier tie into the waterproofing or dampproof membranes.
3. Seal upper edge of Blueskin® TWF with HE925 BES Sealant or Polybitume® 570-05.

Air-Bloc 06, 21 or 32MR

**FOUNDATION  
 DETAIL**

BRICK VENEER / CONC. BLK. WALL

Scale: N.T.S.

Plot: 1:5

Issued: 08-14-97

Revision: 07

**AB-9B96**



15 Walsend Drive, Toronto ON M1E 3X6  
 Technical Services - 800-486-1278  
 Email: techservices@henry.com  
 www.ca.henry.com