


AIR-BLOC® MR16 REBATE WINDOW DETAIL GUIDELINES CONSISTS OF TWO PARTS. REFER TO DETAIL AB16MR - 6B1A FOR PREVIOUS STEPS 1-2.

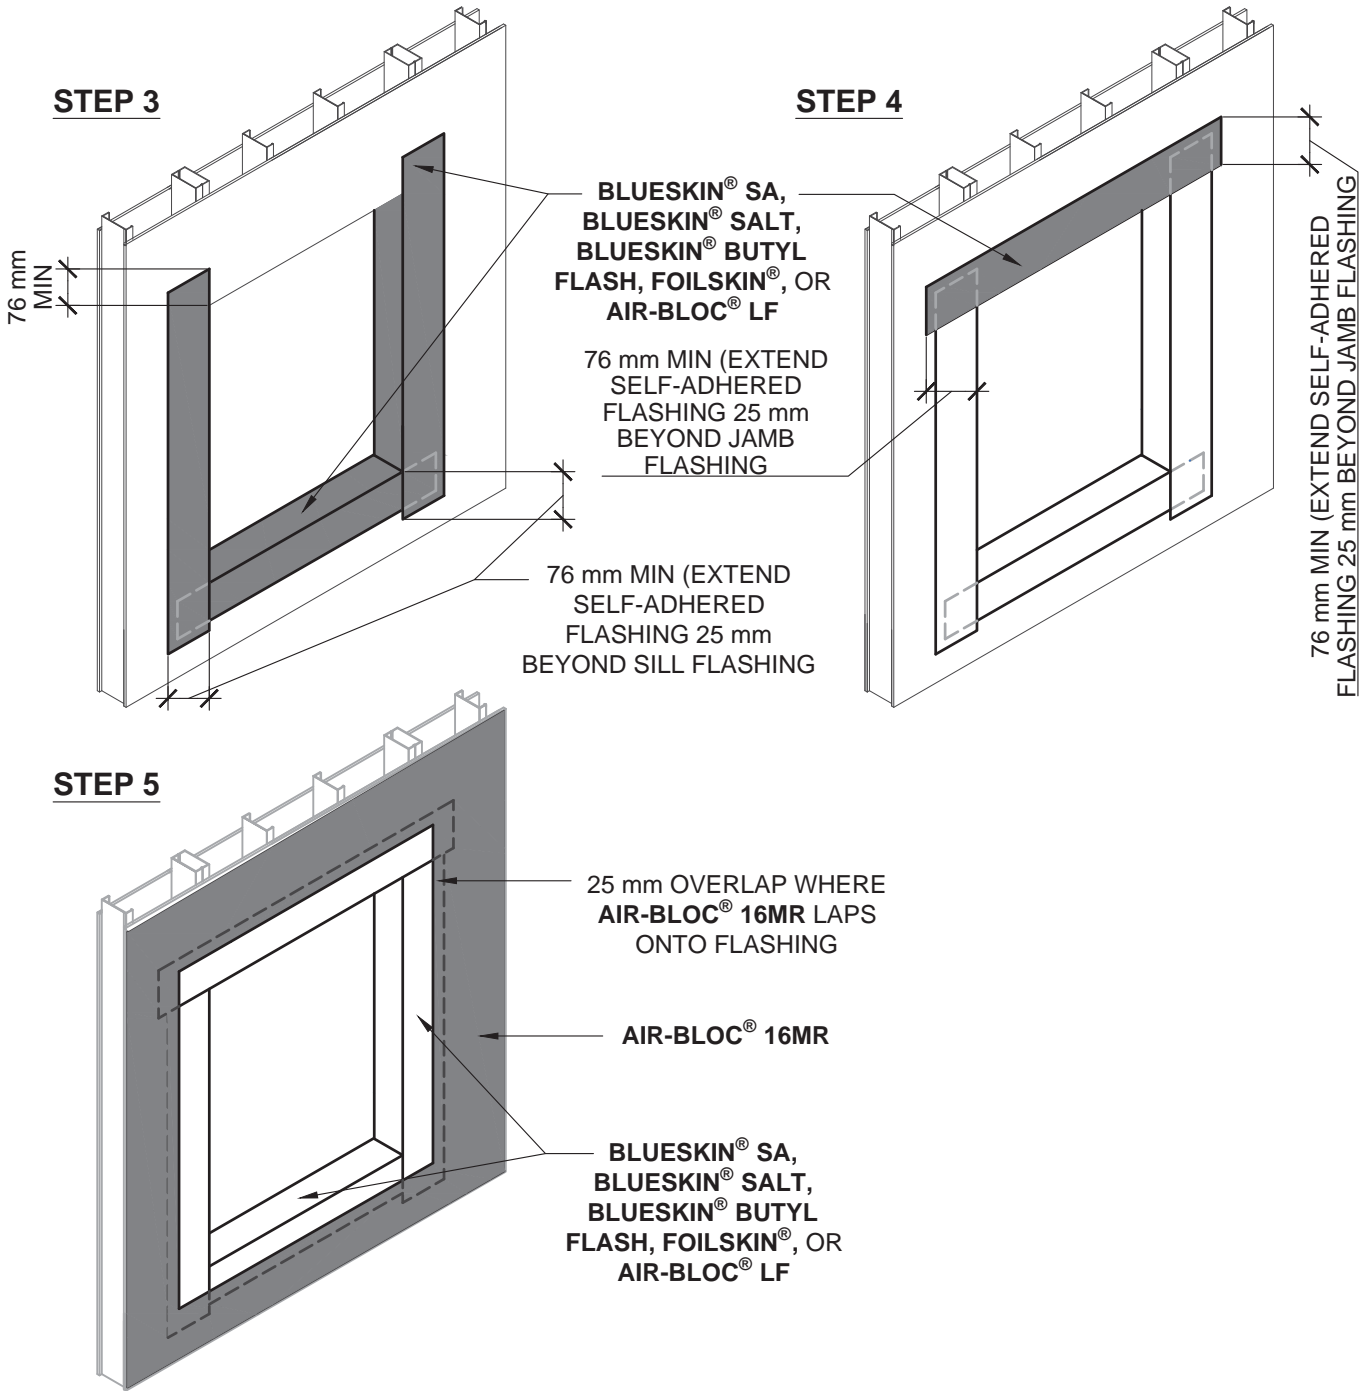

NOTES:

1. SEE NOTES ON DETAIL AB16MR - 6B1A.

Henry®

15 Wallsend Drive,
Scarborough, Ontario, M1E 3X6
800-486-1278 • www.henry.com

MANUFACTURER GUIDE DETAILS ARE FOR REFERENCE ONLY. HENRY® DOES NOT ASSUME RESPONSIBILITY FOR ERRORS OR DEVIATIONS IN DESIGN OR ENGINEERING. PROJECT SPECIFIC VERIFICATION IS RECOMMENDED PRIOR TO INSTALLATION.

AIR-BLOC® 16MR AIR AND VAPOUR BARRIER

REBATE WINDOW

METHOD A - AIR-BLOC® 16MR INSTALLED
AFTER FLASHING - PART 2 OF 2

SCALE: N.T.S.

10-25-2016

AB16MR-6B1B