



Create bellows in membrane by looping into gap. Prior to installation, adhere membrane to itself and install to prevent adhesion to surfaces within gap.

Two ply siamese application method

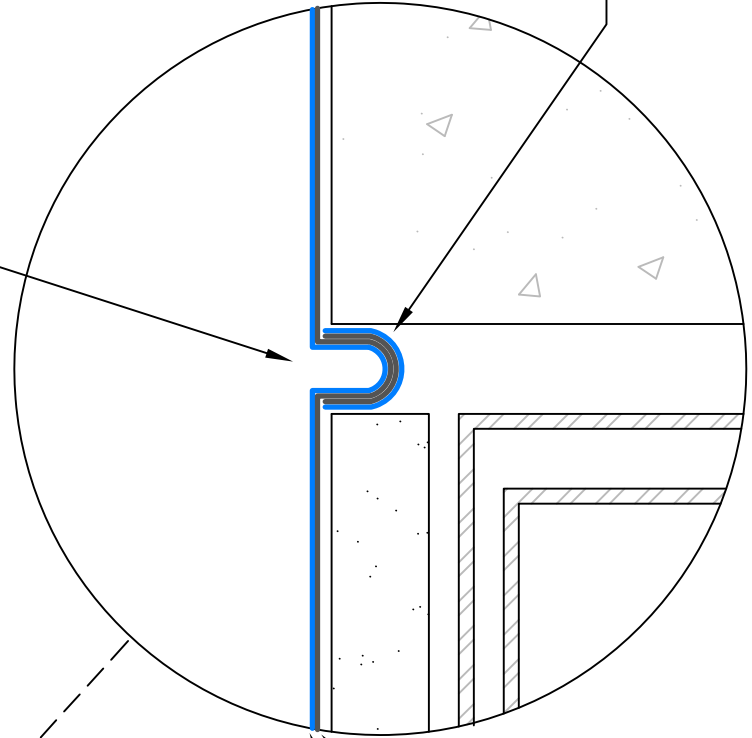

Rubberized Asphalt Adhesive

Polyethylene Film

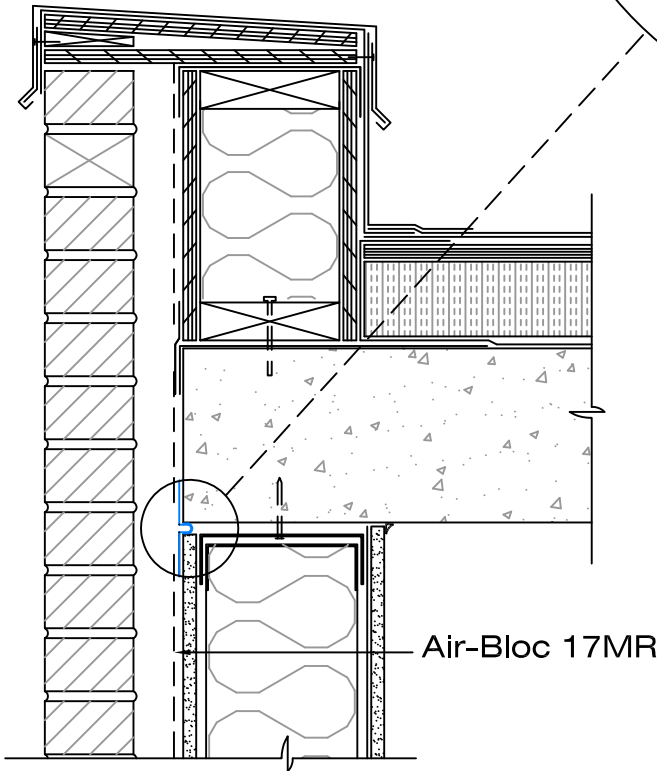

Air-Bloc 17MR

Henry
COMPANY

PERMEABLE AIR-BLOC MEMBRANE

SCALE: N.T.S.

BRICK VENEER/ STEEL STUD WALL

10-07-14

DEFLECTION JOINT
DETAIL

LPS-04