


Precast Joint Detail

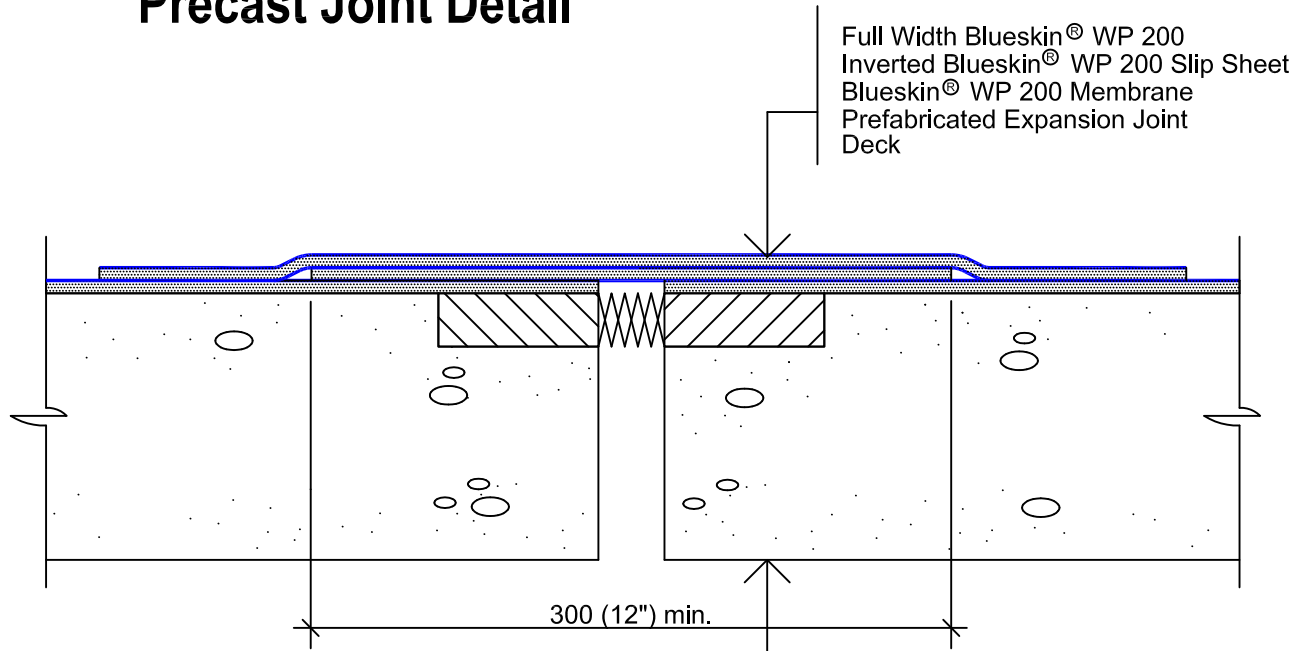

Expansion Joint

Notes

1. Provide a night-seal application of HE925 BES Sealant (or) Polybitume® 570-05 to reinforcement membrane terminations if not covered on the same day by field membrane.
2. End joints of precast units should be reinforced with a 300mm (12") wide strip of Blueskin® WP 200.

Blueskin® WP 200

EXPANSION & JOINT DETAILS

SELF-ADHERED WATERPROOFING SYSTEM

Scale: N.T.S.

Plot: 1.5

Issued: 02-14-98

Revision: 04

WP-9B98



15 Walsend Drive, Toronto ON M1E 3X6
Technical Services - 800-486-1278
Email: techservices@henry.com
www.ca.henry.com